
DF198

MicroBrite™ Diffuse Ring Light Series Product Datasheet



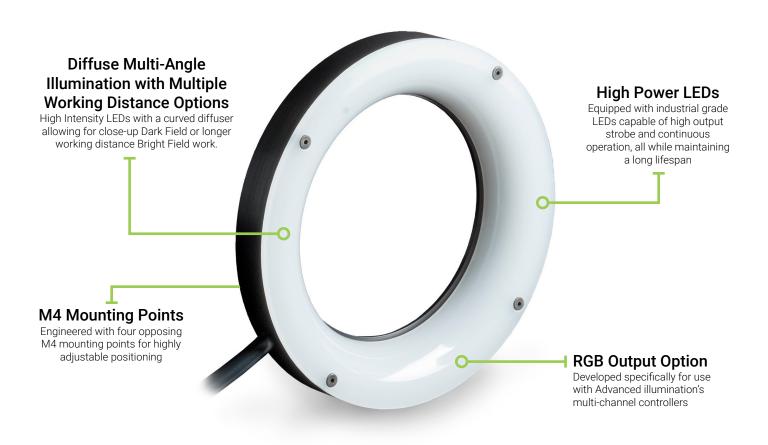

DF198 Series Description

The MicroBrite DF198 Series Dark Field ring lights are designed to provide diffuse, medium to low angle of incidence illumination when positioned at working distances less than or equal to the light's diameter.

Owing to its curved diffuser, the DF198 Series is also suitable for applications requiring diffuse Bright Field lighting when the light is positioned at working distances longer than its diameter.

The unique combination of 5 available light diameters and a variety of possible working distances offers potential solutions for multiple light geometries and intensity and pattern size on target options in a single light head.



Bright Field and Dark Field Illumination



High Intensity



Multiple Sizes Available



RGB Available



1-2 Week BTO Lead Times

DF198 SeriesProduct Datasheet

MicroBrite[™] Diffuse Ring Light Series



General Information

General Specifications						
Category	Specification	on		Detail		
	Available Wavelengths			WHI, 455nm, 530nm, 625nm, RGB		
Optical	Available Le	nsing		No Lenses		
	Available Liç	ght Conditionii	ng	None		
Electrical	Power Cons	Power Consumption Info		See Power Requirements on Page 10		
Electrical	Cable Info			80" -0/+6" Long (2 m -0/+150 mm), -105 °C Rated, Foil	Shield w/ Drain	
		Standard	Height	.56" (14.1 mm) to .62" (15.7 mm)	See Page 7 for More Details	
	Sizing Info		Outer Diameter	1.97" (50.00 mm) to 11.02" (280.0 mm)		
			Inner Diameter	1.24" (31.6mm) to 10.01"(254.3mm)		
Mechanical	Weight Info	(Standard)		\sim 0.14 lbs (~63 g) per DF198-050 Unit, \sim 0.28 lbs (~127 g) per DF198-115 Unit, \sim 0.50 lbs (~226 g) per DF198-180 Unit, \sim 0.79 lbs (~358 g) per DF198-280 Unit,		
	Mounting Info			M4 Mounting Holes		
	Material Info			Anodized Aluminum Housing, Acrylic Window, PVC Ca Fasteners	ble Jacket, Steel Black Oxide	
Thomas	Operating Case Temperatures			25 °C to 60 °C		
Thermal	Operating Ambient Temperatures			0 °C to 35 °C		
	Compliance			CE, RoHS, IEC 62471		
Certification	IP Rating			IP40		
	Lumen Maintenance - White Only			L70 (50,000 Hours)		

DF198 Series

Product Datasheet

MicroBrite™ Diffuse Ring Light Series



General Information - Continued

Part Number Key

Model	-	Outer Diameter (mm)	Illuminated Field of View (mm)	Connector/Control	-	Alternative Connector
DF198	-	XXX	XX	XX	X	Χ
DF198		050	455 (royal blue)	C1		M8 ¹
		095	530 (green)	C5		M12 ¹
		115	625 (red)	IC		
		180	WHI (white)	13		
		280	RGB (all colors) ³	13S		
				24 ²		
more info on page		8	5	10		6

Example Part Numbers:

DF198-100WHII3


 1 Available with IC, I3, I3S, and 24 options only 2 The 24 version will have a lower output intensity by ~ 10 -15% and operate at a temperature ~ 10 -15% higher than other options; not available in 50 mm outer diameter 3 Available with C1 connector only

In Stock Lead Times

Unavailable

Stock products ship within three days.
Build-to-Order custom products ship within one to two weeks.


Configurator

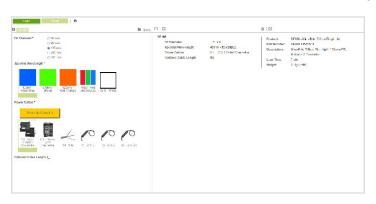


Need a build-to-order custom lighting solution in 2 weeks or less? Advanced Illumination's online configurator helps you tailor our DF198 MicroBrite™ Diffuse Ring Lights to your specific needs. For a guided configuration, visit our online configurator.



Optical Information

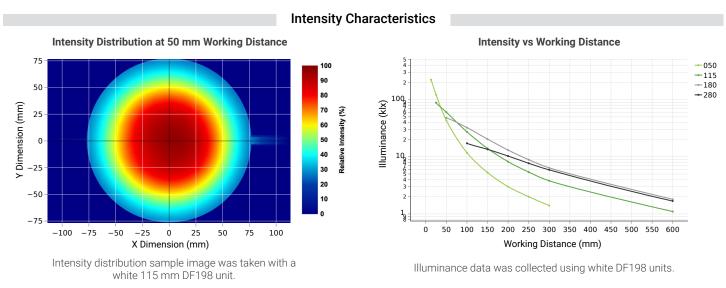


FWHM vs Working Distance

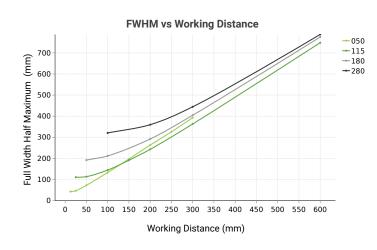

Full Width Half Maximum (FWHM) data collected using white DF198 units of various sizes.

Continuous vs Pulsed Intensity

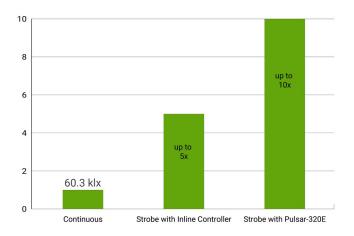

Under continuous operation, a 115 mm white DF198 unit will output an **illuminance of 60.3 klx** and an **irradiance of 190 W/m²** at a 50 mm working distance. For applications that require higher output, the DF198 Series has been engineered to be overdrive strobe capable. When configured with Al's strobe enabled Inline Controller (ICS-3 and ICS-3S), the DF198 is capable of outputting up-to 5X continuous levels. When configured with a C5 connector, compatible with Al's Pulsar 320, a **DF198 can be strobed up-to 10X continuous intensity levels.**


bi 170 can be strobed up to 10% continuous intensity levels.

Disclaimer. The measurements provided above are for approximations only and may vary depending on the method of measurement and the specific configuration being measured.



Optical Information - Continued

White Spectral Profile

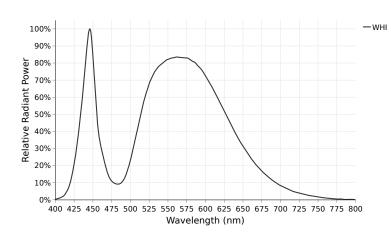


White LED illumination is the most commonly used machine vision lighting configuration. It is often the default choice when specific features of interest do not require color-based highlighting. However, white LEDs can vary in color temperature, which can impact machine vision systems, specifically when matching white light sources.

The DF198 Series white LEDs have a relatively neutral color correlated temperature (CCT) of 5500~K.

For a more detailed look at the white spectral data, download the csv file of the raw spectral values and refer to our Product Spectra Distribution Charts PDF.

Visible Spectral Profiles

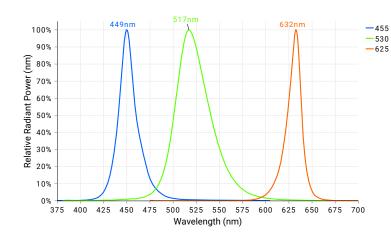

Visible color illumination consists of using wavelengths between 400-700 nm to either create or eliminate contrast on an inspection subject based on differences in a features color hue. When referring to a color wheel, simply remember the following: like colors reflect and brighten surfaces; conversely, opposing colors absorb and darken surfaces.

The DF198 Series is available in $455 \, \text{nm}$, $530 \, \text{nm}$, and $625 \, \text{nm}$ configurations.

For a more detailed look at the visible color spectral data, download the csv file of the raw spectral values and refer to our Product Spectra Distribution Charts PDF.

DF198 SeriesProduct Datasheet

MicroBrite™ Diffuse Ring Light Series



Optical Information - Continued

Photobiological Risk Factors

Group	Description	Affected Wavelengths (nm)
Exempt	No Photobiological Hazard	N/A
Group 1	No Photobiological hazard under normal behavioral limitations	455, 530, 625, WHI, RGB
Group 2	Does not pose a hazard due to aversion response to bright light or thermal discomfort	N/A

Advanced Illumination's lighting products have been tested and classified to IEC standards by accredited testing services. For more information on photobiological risk factors, please view the following PDF: https://www.advancedillumination.com/wp-content/uploads/2019/04/IEC-040119.pdf

Cleaning Guidelines



To clean our light's optics, it is best to only clean when necessary. Dusting is always the first step in cleaning your optics. Wiping a dusty optic is like cleaning it with sandpaper. So always dust with a canned air duster or compressed and filtered air before wiping any optic. If the dusted optic has no visible stains after you dust it, then remember: "If it's not dirty, don't clean it." Avoid wiping optics when possible.

If dusting did not clean the lens or the lens has stains, use only de-ionized water and mild dish soap with a low lint cloth designed for optics to avoid damage to the optic by any harsh chemicals.


Polarizers, beam splitters and collimated films should never be wiped with any type of cloth or solvent, only use the air dusting method to clean these types of optics.

The aluminum housing can be wiped down when dusting is not a sufficient means to thoroughly clean.



Mechanical Information

Installation Drawings

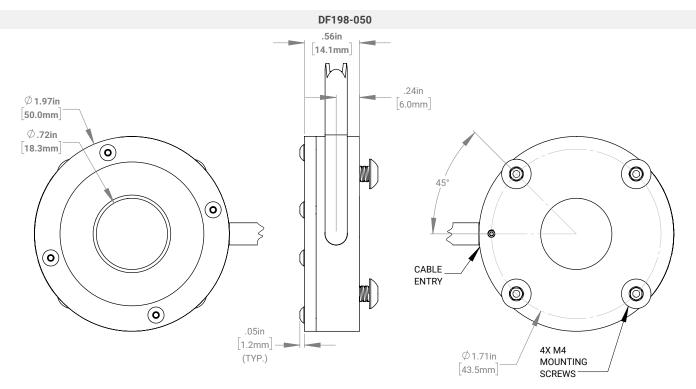

For full installation drawings and complete CAD models of this configuration, please visit the downloads section of the product webpage.

DF198-095 .62in 4X M4 THREADED MOUNTING HOLES Ø3.68in 15.7mm 93.5mm .24in [6.0mm] Ø 2.17in 55.0mm 0 (O) 0 45° CABLE **ENTRY** (**6**) .21in [5.4mm] (TYP.) \emptyset 3.41in [86.6mm] 4X M4 MOUNTING SCREWS


For full installation drawings and complete CAD models of this configuration, please visit the downloads section of the product webpage.




Mechanical Information

Installation Drawings

DF198-115

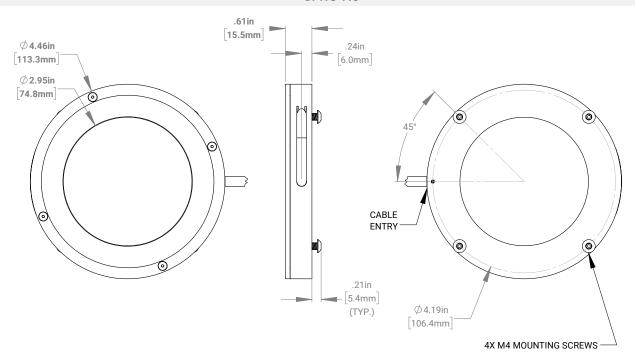

For full installation drawings and complete CAD models of this configuration, please visit the downloads section of the product webpage.

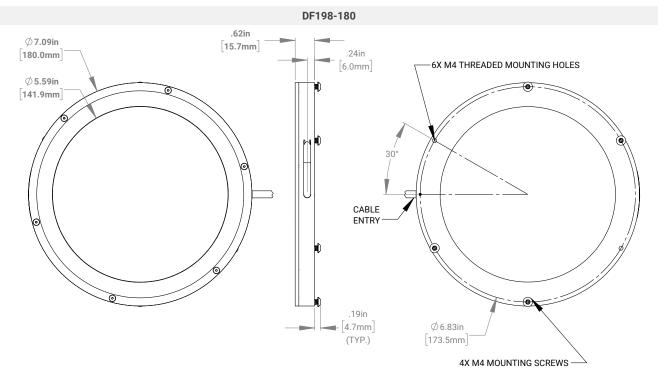

For full installation drawings and complete CAD models of this configuration, please visit the downloads section of the product webpage.



Mechanical Information

Installation Drawings

DF198-280 Ø 9.50in [241.4mm] Ø 11.02in [280.0mm] 8X M4 THREADED MOUNTING HOLES CABLE ENTRY 4X M4 MOUNTING SCREWS

For full installation drawings and complete CAD models of this configuration, please visit the downloads section of the product webpage.



Electrical Information

Power Requirements

Current Required for Power Supply Sizing

Part Number	Wavelengths (nm)	Configured w/ 24V Driver	Configured w/ Standard Controller (C1, C5, IC, I3, I3S)
DF198-050	625	N/A	0.13 A Max
DF198-050	455, 530, WHI	N/A	0.22 A Max
DF198-050	RGB	N/A	0.65 A Max
DF198-115	625	0.32 A	0.32 A Max
DF198-115	455, 530, WHI	0.32 A	0.54 A Max
DF198-115	RGB	N/A	0.95 A Max
DF198-180	625	0.64 A	0.58 A Max
DF198-180	455, 530, WHI	0.64 A	0.97 A Max
DF198-180	RGB	N/A	2.55 A Max
DF198-280	625	0.96 A	0.58 A Max
DF198-280	455, 530, WHI	0.96 A	0.97 A Max
DF198-280	RGB	N/A	3.60 A Max

Note: All Advanced Illumination lights and controllers are nominally powered by 24V DC unless otherwise noted. Strobe overdriving with controller based models may require more current and voltage overhead. The values above do not include background current draw from the controller (~100 mA total).

Control Options

Controller Image	Controller Details	Connector Image
------------------	--------------------	-----------------

DCS Single Output Controller - Compatible with C1 Configurations

PN: DCS-100E

DCS total control of the control of

The DCS-100E is a compact, din-rail mounted general-purpose external controller with one C1 output connector, wired with three channels. Capable of providing single channel control or multi-channel control for RGB compatible lights.

Output Power: 90 W Max Continuous, 540 W Max Pulsed (Overdrive Strobe)

Output Current: 4.5A Max Continuous, 15 A Max Pulsed

I/Os: 3 External Trigger Inputs

Interface: 10/100 Ethernet with Software and browser-based GUIs. SDKs are also available.

For more information about our DCS-100E, please visit the controller product page.



DCS Triple Output Controller - Compatible with C1 Configurations PN: DCS-103E

The DCS-103E is a din-rail mounted general-purpose multi-light controller with three C1 output connectors. Capable of driving three lights in sync or asynchronously.

Output Power: 30 W Max Continuous / Output, 180 W Max Pulsed / Output Output Current: 1.5A Max Continuous / Output, 5 A Max Pulsed / Output

I/Os: 3 External Trigger Inputs

Interface: 10/100 Ethernet with Software and browser-based GUIs. SDKs are also available.

For more information about our DCS-103E, please visit the controller product page.



Page 10/14



Electrical Information - Continued

Control Options - Continued

Controller Image Controller Details Connector Image

Pulsar 320E High Current Controller - Compatible with C5 Configuration

PN: Pulsar 320E

lights at very shall light light

The Pulsar 320E is a high-power, dual output, pulse-only controller geared for overdriving driving lights at very short flash durations with very high current.

Output Power: 2500 W Max Pulsed / Output Output Current: 50 A Max Pulsed / Output

I/Os: 2 External Trigger Inputs

Interface: 10/100 Ethernet with Software GUI. SDKs are also available.

For more information about our Pulsar 320E, please visit the controller product page.

Inline Controller - Continuous Only - IC Configurations

PN: N/A

The IC is an inline, cable-mounted continuous-only controller configured/wired directly for the ordered light head.

Output Power: 25 W Max Continuous Output Current: 1.25 A Max Continuous I/O: 1 0-10 V Analog Dimming Input

Interface: Direct Cable (flying leads or optional connector)

For more information about our IC Controller please visit the controller product page.

Inline Controller - Strobe and Continuous - I3 & I3S Configurations

PN: N/A

The I3 and I3S are inline, cable-mounted continuous and pulse (overdrive strobe) capable controllers configured/wired directly for the ordered light head. When operated in pulsed mode, the I3 is a default-on device on power up, whereas the I3S is default-off, requiring a trigger to illuminate.

Output Power: 25 W Max Continuous, 125 W Max Pulsed

Output Current: 1.25 A Max Continuous, 8 A Max Pulsed (Load Dependent)

I/Os: 1 Gated Trigger Signal, 1 0-10 V Analog Dimming Input Interface: Direct Cable (flying leads or optional connector)

For more information about our I3/I3S Controller, please visit the controller product page.









Electrical Information - Continued

Inline Control Option Wiring Information

Standard Flying Lead and Optional M12 Connector Pinout Functions

Pin (M12)	Wire Color	24V Functions	IC Functions	I3/I3S Functions	M12 Pinout
1	BROWN	24V DC	24V DC	24V DC	
2	WHITE	N/A	0-10V Analog Control	Reserved	(4)
3	BLUE	DC GND	DC GND	DC GND	$ \begin{array}{c} \boxed{0} \ \boxed{5} \ \boxed{2} \end{array} $
4	BLACK	N/A	Gate Low	PNP/Active High Trigger	5-Position Male Connector
5	GRAY	N/A	N/A	0-10V Analog Control	3-Fosition wate connector

The functions above are only applicable when ordering an 24, IC, I3, I3s, or I4 power configuration with our without an M12 connector. For more wiring information pertaining to strobing and dimming functionality, please download the controller manuals and datasheets.

Optional M8 Connector Pinout Functions

Pin (M12)	Wire Color	24V Functions	IC Functions	13/13S Functions	M8 Pinout
1	BROWN	24V DC	24V DC	24V DC	
2	WHITE	N/A	0-10V Analog Control	Reserved	
3	BLUE	DC GND	DC GND	DC GND	(34)
4	BLACK	N/A	Gate Low	Active High Trigger	4-Position Male Connector

The functions above are only applicable when ordering an 24, IC, I3, or I3s power configuration with our without an M8 connector. For more wiring information pertaining to strobing and dimming functionality, please download the controller manuals and datasheets.

Accessories

Category	Accessory Image	Accessory Detail
Power Supply		24 Volt DC Power Supply PN: PS24-TL This convenient power source is a universal AC input switching power supply with a regulated output DC current. The power supply comes with an LED Power Indicator, tinned leads marked Positive (+) and Negative (-) and 2 WAGO connectors for simplified assembly. For more information about our 24 Volt DC Power Supply, please visit this webpage.
Dimmer		Manual Dimming Accessory for the IC, I3 and I3s PN: DCS-MP The DCS-MP is a 30-position potentiometer, detented for precision level control and provides repeatable dimming with cable inline controllers. Features include DIN-rail mountable, a flip up cover to prevent accidental adjustments, spring clamp wiring terminal for flying leads or an M12 connector for use with the IC or I3/I3S Inline Controllers. For more information about our Manual Dimming Accessory please visit this webpage.
	May .	Manual Dimming Accessory for the IC PN: MP-ICS

Dimmer

The MP-ICS is a dimmer which is designed for use on lights with the IC Inline Controller. This unit provides for 0 – 100% intensity control. It is NOT COMPATIBLE with LLI37, BLI38, LLI67, and BLI68 "IC" Lights or lights built with the "24v controller" option.

For more information about our Manual Dimming Accessory, please visit this webpage.

MicroBrite[™] Diffuse Ring Light Series



Accessories - Continued

Category	Accessory Image	Accessory Detail
Extension Cable		DCS-100E/103E Extension Cable, Single Light Power Cable - C1 Configuration PN: LC-XX-S This extension cable was designed for applications requiring power cables longer than the standard 2 meters provided with Ai lights. This single light cable features a single male and single female 7 pin locking connector (C1) and can be purchased in 3 - 15-meter lengths. For more information about our DCS-100E/103E Extension Cable, Single Output, please visit this webpage.
Extension Cable		DCS-100E/103E Extension Cable, Dual Light Power Cable - C1 Configuration PN: LC-XX-Y This extension cable was designed for applications requiring two identical lights to be powered through a single controller. These Y cables feature a single male and dual female 7 pin locking connectors (C1) and can be purchased in 3 - 15-meter lengths. See attached spec sheet for compatible light configuration. For more information about our DCS-100E/103E Extension Cable, Split Output, please visit this webpage.
Extension Cable		Pulsar 320E Extension Cable - C5 Configuration PN: LC-XX-S-C5 This extension cable was designed for applications requiring power cables longer than the standard 2 meters provided with Ai lights. This single light cable features a single male and single female Pulsar 320 connector (C5) and can be purchased in 3 - 15 meter lengths. For more information about our Pulsar 320E Extension Cable, please visit this webpage.
Adaptor Cable		Cognex Gen2 Inline Controller Adaptor Cable PN: AD-I3-CGX2 This cable adaptor is for connecting I3/I3S configured lights with Cognex Gen2 Cameras, and comes with a male to female M12 connectors. For more information about our Cognex Gen2 Inline Controller Adaptor Cable, please visit this webpage.
Filters		Camera Lens Band Pass Filters PN: BPXXX-YYY Eliminating all but a narrow band of light (+/- 40nm) centered on the specified wavelength, band pass filters are used to enhance colors, or to stop unwanted ambient light from reaching the camera. Filtering can replace existing shrouds, simplifying the physical set up of an inspection site. Ai offers 635nm and 660nm band pass filters to fit several different lens sizes.

Product Version: REV - Document Date: 04/22/25 Page 13/14

For more information about our Camera Lens Band Pass Filters, please visit this webpage.

DF198 SeriesProduct Datasheet

MicroBrite™ Diffuse Ring Light Series



Additional Information

Warranty

Every Advanced illumination, Inc. (Ai) product is thoroughly inspected and tested before leaving the factory. Products are warranted to be free of defects in workmanship and materials for a period of FIVE YEARS from the original date of purchase. Should a defect develop during this period, customers may return the complete product, freight prepaid, to one of Ai's distributors or to the Ai factory. All product warranty returns require a Return Merchandise Authorization (RMA) number which is obtained from Customer Service. The RMA number must be clearly marked on the outside of the package. Ai will inspect the unit, and if a defect is found will, at our option, repair or replace the product without charge. Ai disclaims liability for any implied warranties, including implied warranties of "merchantability" and "fitness for a specific purpose." For products under warranty that have since been discontinued, Ai will make an effort to replace with equivalent parts; for circumstances that do not allow for equivalent replacement, Ai reserves the right to repair or replace these products with an updated version. Ai cannot be held responsible for the unauthorized or inappropriate use of its products. Any unauthorized repair or modifications will result in a voided warranty. No Liability for Consequential Damages: In no event shall Ai be liable for any consequential, special, incidental, or indirect damages of any kind arising from the sale or use of the products.

Compliancy

Our lighting products are designed and tested to meet CE, RoHS, and IEC standards. As a global ISO 9001 certified company, we understand the importance of compliance and perform accelerated testing on every product before shipment. For more information on our compliance standards, please see our compliancy documentation here: https://www.advancedillumination.com/services/compliance-statements/

Electromagnetic Compatibility

This product was tested and complies with the regulatory requirements and limits for electromagnetic compatibility (EMC) as stated in the product specifications. These requirements and limits are designed to provide reasonable protection against harmful interference only when the product is operated in its intended industrial electromagnetic environment. To minimize the potential for electromagnetic interference or unacceptable performance degradation, install and use this product in strict accordance with the instructions in the product documentation.

Customer Service

For information on existing orders, or to make an order adjustment, contact us Monday through Friday 8:00 am to 5:00 pm ET or send an email to orders@advancedillumination.com.

Company Information

Advanced Illumination
440 State Garage Road, Rochester, VT 05767
Phone: +1 (802) 767 3830
Fax: +1 (802) 767 2636
Email: info@advancedillumination.com
Web: advancedillumination.com
© 2023 Advanced illumination Inc. All rights reserved